



English






V7 Wireless Keyboard & Mouse Quick Start Guide

08-1667



Español


V7 inalámbrico Teclado y mouse Guía de inicio rápido




Items Included
A Wireless keyboard
B AA batteries (2)
C Wireless mouse
D AAA batteries (2)
E USB receiver
This Quick Start Guide

If you are missing any of these items, contact V7 online at www.V7-world.com

Battery placement

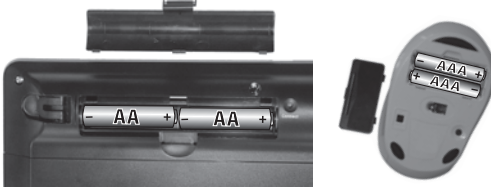

USB receiver setup

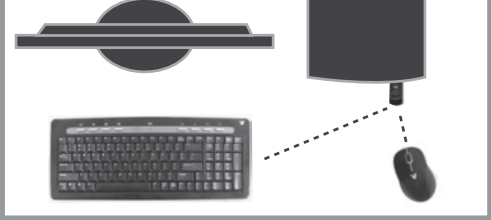

Synchronization buttons



Setting up your keyboard and mouse

- 1 Insert batteries into mouse and keyboard.
- 2 Connect the USB receiver into an available USB port on your computer or into the USB extension cable.
- 3 Place the keyboard and mouse within 6 feet of the USB receiver. Make sure there are no obstructions between the keyboard, mouse and the USB receiver.
- 4 The operating system will automatically detect the keyboard and mouse and it will begin working. If it does not work, see *Synchronizing your keyboard and mouse*.


Synchronizing your keyboard and mouse

Synchronize your keyboard and mouse each time the batteries are changed and if the keyboard or mouse stops responding.

- 1 Press and hold the receiver synchronization button for 3 seconds.
 - 2 Press the keyboard synchronization button with a paperclip.
 - 3 Press the mouse synchronization button with a paperclip.
 - 4 The keyboard and mouse will begin working.
- Note:** If the keyboard or mouse does not work, replace the batteries and repeat Steps 1, 2 or 3.

Using your keyboard

Your wireless keyboard includes 8 hot keys:

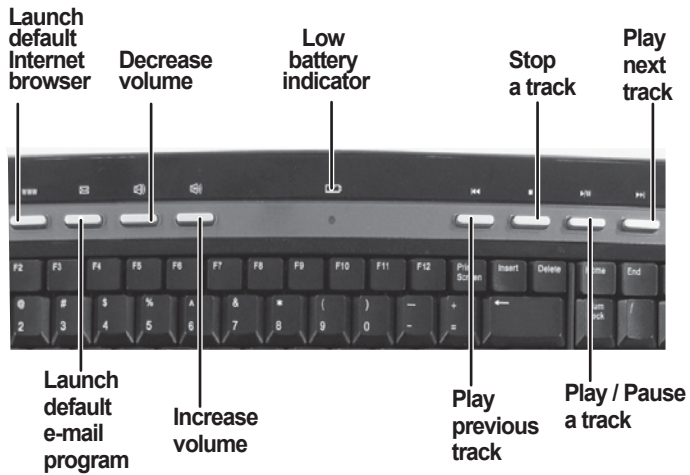

Preserving battery life on your mouse






To preserve battery life, turn the mouse off when it is not in use.



For questions regarding your V7 product, please visit www.V7-world.com.

One Year Limited Warranty


V7 Limited Manufacturer's Warranty covers this Product against defects in materials or workmanship from the date of purchase for a period of twelve (12) months for parts and labor. Liability under this limited warranty shall in no event exceed the cost of replacement with a similar product or the original cost of the product at the time of purchase, whichever is less. This limited warranty does not cover the repair of cracked, scratched, broken or modified plastic or other cosmetic damage; or parts that have been altered, defaced or removed. Also, it does not apply to repairs or replacement necessitated by any cause beyond the control of the Manufacturer including, but not limited to, any malfunction, defects or failures which in the opinion of Manufacturer were caused by or resulting from unauthorized service or parts, improper maintenance, operation contrary to furnished instructions, shipping or transit accidents, modification or repair by the user, abuse, misuse, neglect, accident, fire, flood, or other acts of God, incorrect line voltage or normal wear and tear. This limited warranty does not apply to damage that occurs during unpacking, setup, or installation; removal of the product for repair; reinstallation of the product after repair, or shipping cost of the product for any purpose. There are no other expressed warranties, whether written or oral, other than this printed limited warranty. All implied warranties, including without limitation the implied warranties or merchantability or fitness for a particular purpose, are limited to the durations of this limited warranty. In no event shall V7 be liable for incidental or consequential damages of any nature whatsoever, including but not limited to lost profit or commercial loss, to the full extent those damages can be disclaimed by law. This warranty is valid in the United States and Canada. Additional information can be found at www.V7-world.com.




Artículos incluidos
A Teclado inalámbrico
B Pilas AA (2)
C Mouse inalámbrico
D Pilas AAA (2)
E Receptor USB
Esta Guía de inicio rápido

Si no encuentra alguno de estos artículos, comuníquese con V7 en línea en www.V7-world.com

Colocación de las pilas

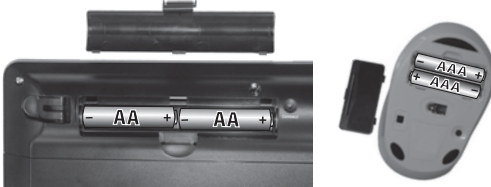

Configuración del receptor USB

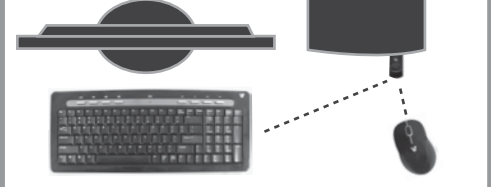

Botones de sincronización



Configuración del teclado y el mouse

- 1 Inserte las pilas en el mouse y en el teclado.
- 2 Conecte el receptor USB en un puerto USB libre de su PC o en el cable de extensión USB.
- 3 Coloque el teclado y el mouse a una distancia de 6 pies (1,8 m) del receptor USB. Compruebe que no haya obstrucciones entre el teclado, el mouse y el receptor USB.
- 4 El sistema operativo detectará automáticamente el teclado y el mouse, y estos empezarán a funcionar. Si no funcionan, consulte *Sincronización del teclado y del mouse*.


Sincronización del teclado y del mouse

Sincronice el teclado y el mouse cada vez que cambie las pilas, y si el teclado o el mouse dejan de responder.

- 1 Pulse y mantenga pulsado el botón de sincronización del receptor durante 3 segundos.
 - 2 Pulse el botón de sincronización del teclado con un sujetapapeles.
 - 3 Pulse el botón de sincronización del mouse con un sujetapapeles.
 - 4 El teclado y el mouse empezarán a funcionar.
- Nota:** si el teclado o el mouse no funcionan, cambie las pilas y repita los pasos 1, 2 o 3.

Uso del teclado

Su teclado incluye 8 teclas de acceso directo:

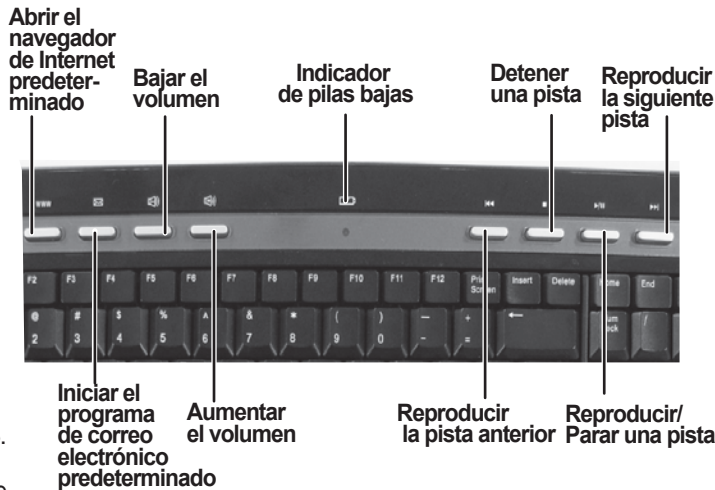

Conservación de la vida útil de las pilas del mouse

Para conservar la vida de las pilas, apague el mouse cuando no lo esté utilizando.



Si tiene preguntas acerca de su producto V7, visite www.V7-world.com.

Términos de la garantía limitada de un año

La garantía limitada del fabricante de V7 cubre a este producto contra defectos en los materiales o mano de obra, a partir de la fecha de compra, durante un período de doce (12) meses en los repuestos y la mano de obra. La responsabilidad bajo esta garantía limitada en ningún caso podrá exceder el coste del repuesto por un producto similar, ni el coste original del producto al momento de la compra, lo que sea menor. Esta garantía limitada no cubre la reparación de plástico agrietado, raspado, roto o modificado ni otros daños cosméticos; ni piezas que hayan sido alteradas, destruidas o extraídas. Tampoco aplica a reparaciones o repuestos necesarios por cualquier causa fuera del control del fabricante incluyendo, entre otros, cualquier mal funcionamiento, defectos o fallos que en opinión del fabricante fueron provocados por o resultado de, piezas o servicio no autorizados, mantenimiento incorrecto, funcionamiento contrario a las instrucciones provistas, accidentes durante el tránsito o el envío, modificaciones o reparaciones realizadas por el usuario, abuso, uso indebido, negligencia, accidentes, incendios, inundaciones u otras causas de fuerza mayor, voltaje de línea incorrecto o desgaste natural. Esta garantía limitada no aplica a los daños que ocurran durante el desembalaje, el montaje o la instalación; la extracción del producto para la reparación; la reinstalación del producto después de la reparación, o el costo del envío del producto por ningún motivo. No existen otras garantías implícitas o a la comerciabilidad e idoneidad para un determinado fin, están limitadas a los períodos de esta garantía limitada. Bajo ninguna circunstancia V7 será responsable por daños incidentales o indirectos de ninguna naturaleza, incluyendo pero sin limitarse al lucro cesante o pérdidas comerciales, en la medida en que, por ley, se pueda negar la responsabilidad por dichos daños. Se puede encontrar más información en www.V7-world.com.